



Matrix Crib

ASSEMBLY INSTRUCTION
INSTRUCTION D'ASSEMBLAGE



839 Central Parkway West,
Mississauga, Ontario, L5C 2V9
Phone: 905-361-1970 Fax: 905-361-1969
Toll Free: 1-877- 728-0342
www.caramiafurniture.com



839 Central Parkway West,
Mississauga, Ontario,
L5C 2V9, Canada


Phone: 905-361-1970
Toll Free: 1-877- 728-0342
Fax: 905-361-1969

Email: info@caramiafurniture.com
(<mailto:info@caramiafurniture.com>)
Web: www.caramiafurniture.com

CRIB ASSEMBLY INSTRUCTIONS


HARDWARE AND TOOL LIST / PIÉCES D'ASSEMBLAGE ET LISTE DES OUTILS

Part A	Qty 8	Allenhead Bolt	Composante A	Qté 8	Boulon Allen
Part B	Qty 6	Allenhead Bolt	Composante B	Qté 6	Boulon Allen
Part C	Qty 4	Allenhead Bolt	Composante C	Qté 4	Boulon Allen
Part D	Qty 8	Allenhead Bolt	Composante D	Qté 8	Boulon Allen
Part E	Qty 14	T-nut	Composante E	Qté 14	T Écroes
Part F	Qty 1	Allen Wrench	Composante F	Qté 1	Clés Allen




Ø6 x 45mm

Part A Qty 8



Ø6 x 55mm

Part B Qty 6




Ø6 x 65mm

Part C Qty 4




Ø6 x 85mm

Part D Qty 8




Ø10 x 15mm

Part E Qty 14

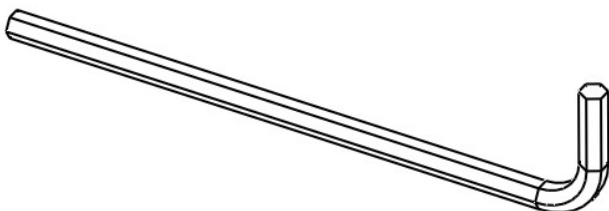

Part F Qty 1



MAIN COMPONENTS/ LES PRINCIPALES COMPOSANTES

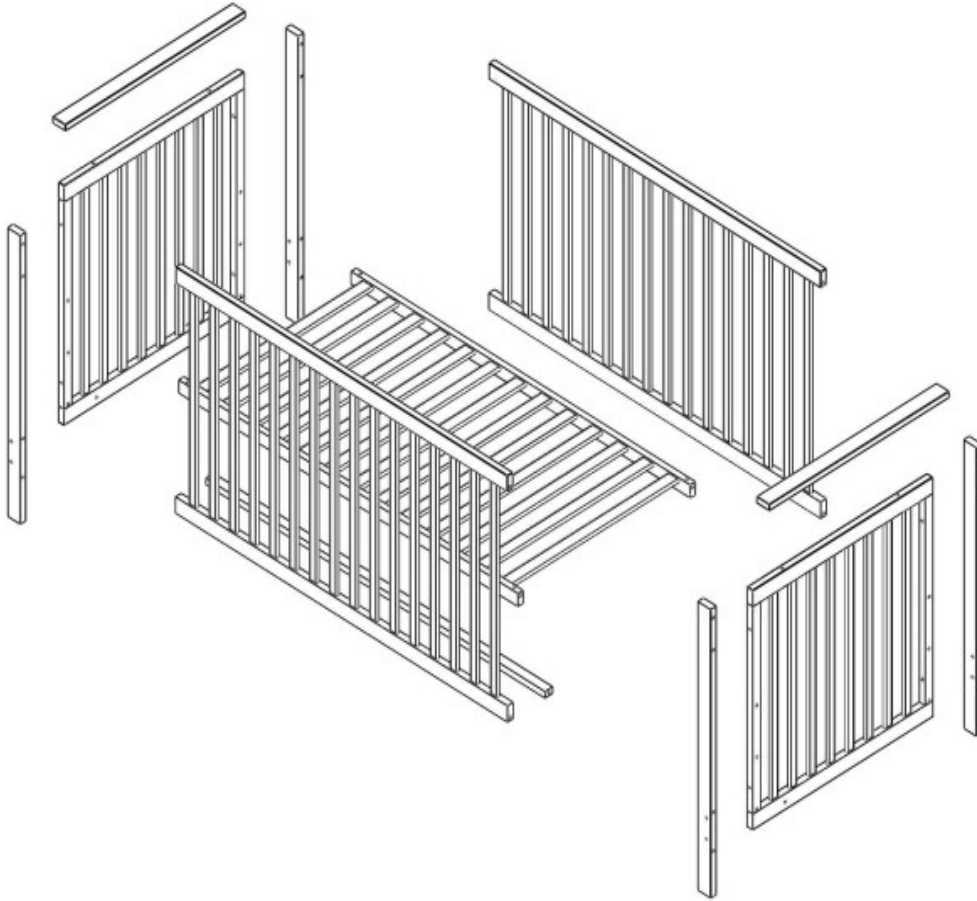


HARDWARE/ PIÈCES D'ASSEMBLAGE

C

4pcs

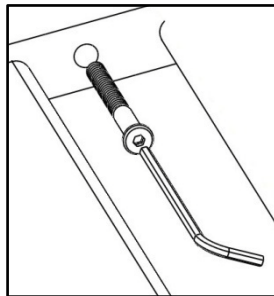


Step 1 / Etape 1

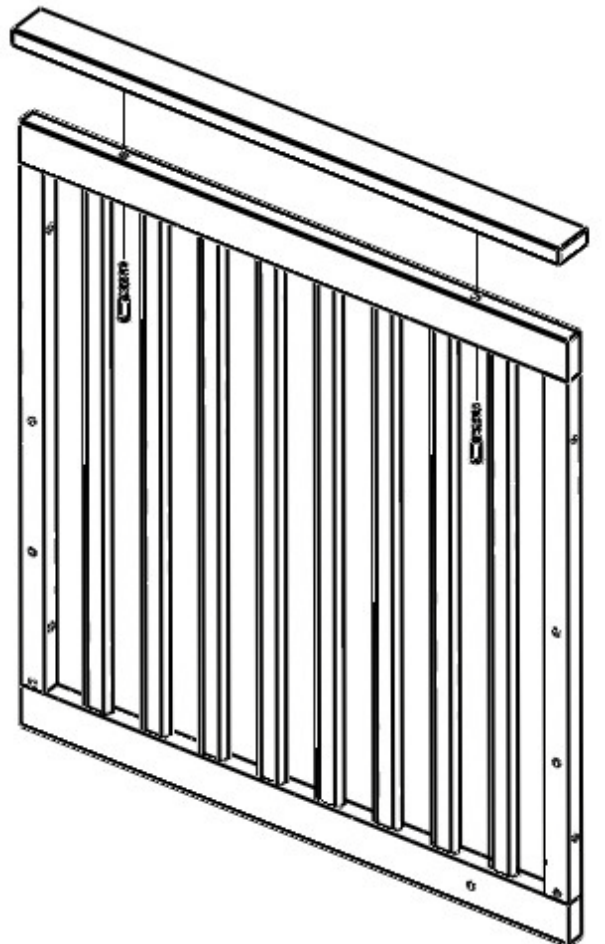

HARDWARE/ PIÈCES D'ASSEMBLAGE


B 2pcs



E 2pcs




Step 1 / Etape 1

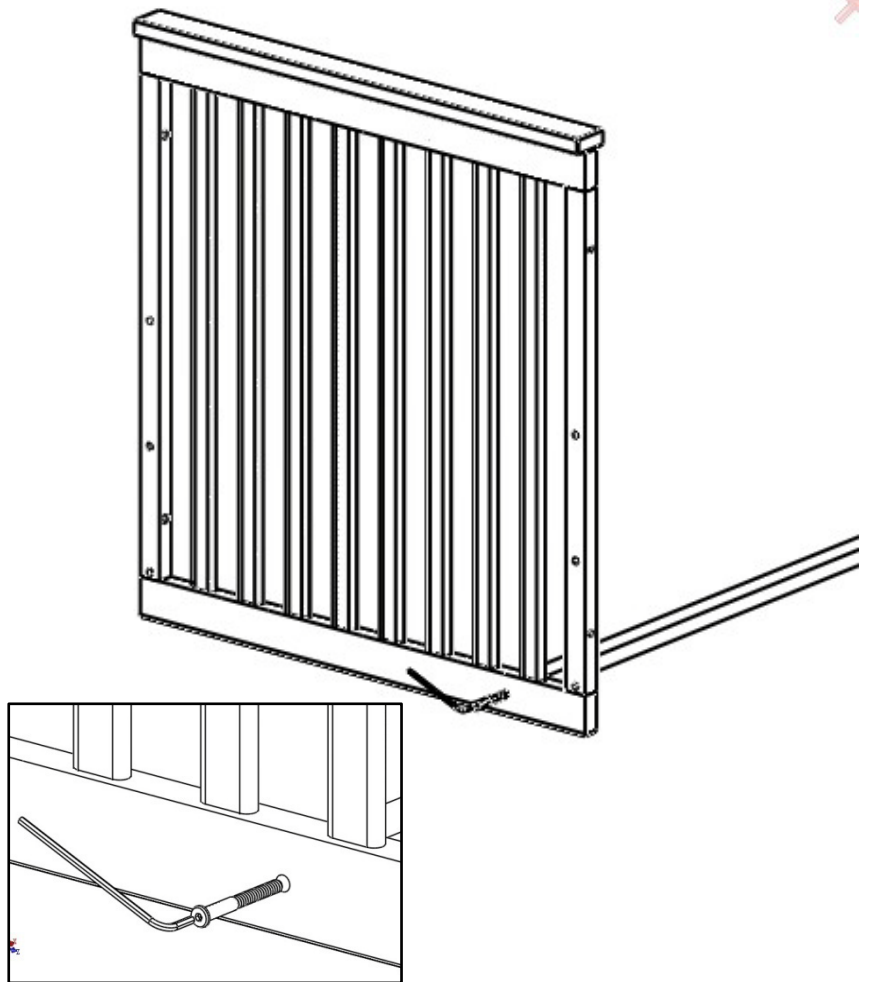

HARDWARE/ PIÈCES D'ASSEMBLAGE


B 4pcs



E 4pcs



Step 2 / Etape 2

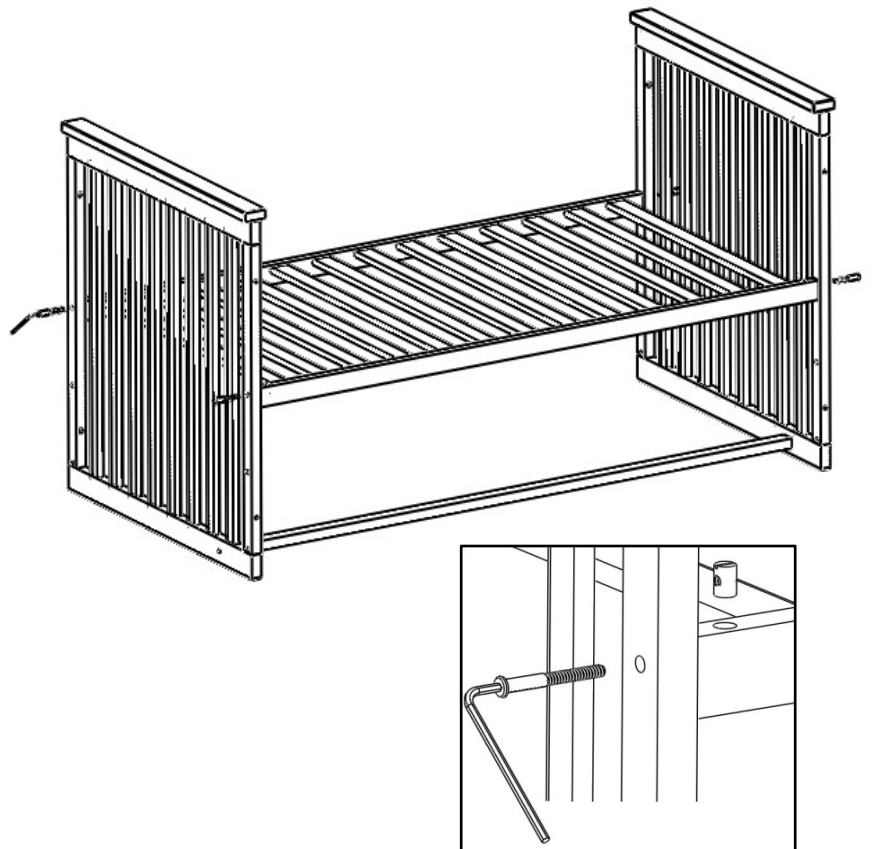

HARDWARE/ PIÈCES D'ASSEMBLAGE



D 8pcs



E 8pcs




Step 3 / Etape 3

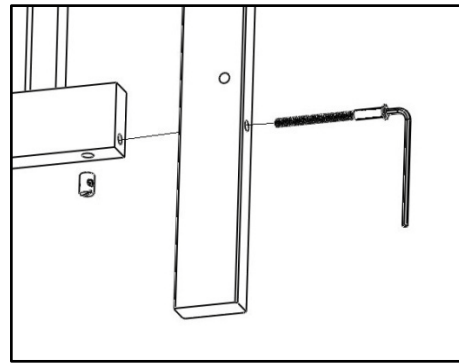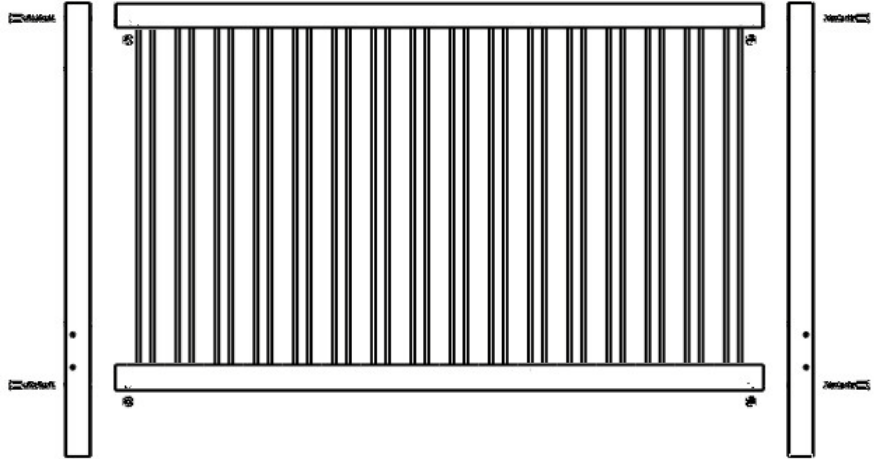

HARDWARE/ PIÈCES D'ASSEMBLAGE

A 8pcs



Step 4 / Etape 4

